




Parts included

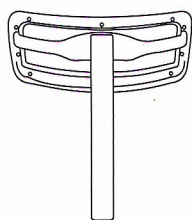


Chair Backrest Assembly

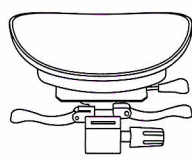

Chair Seat Assembly

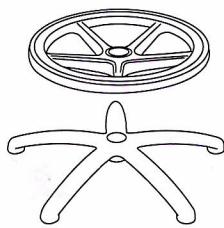


Adjustable Footring Composite Base

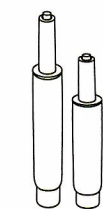

Cylinder x2



Casters x 5

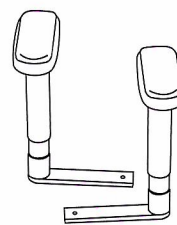


Armrests x2




Armrest attachment knob x2

1. Insert casters(wheels) into base. Apply a significant amount of pressure to ensure casters are seated properly.
2. Insert cylinder of your choice into base.
3. Slide adjustable footring over cylinder and tighten footring by spinning it clockwise.
4. Place the chair seat assembly on top of cylinder.
5. Insert chair back assembly into chair seat assembly.
REPLACE SMALL BLACK PLUG AFTER INSTALLATION.
6. Slide armrests into designated slots on either side of the chair seat assembly. Tighten armrest attachments knobs to lock armrests in place
7. Sit on chair to permanently lock cylinder into base and seat.

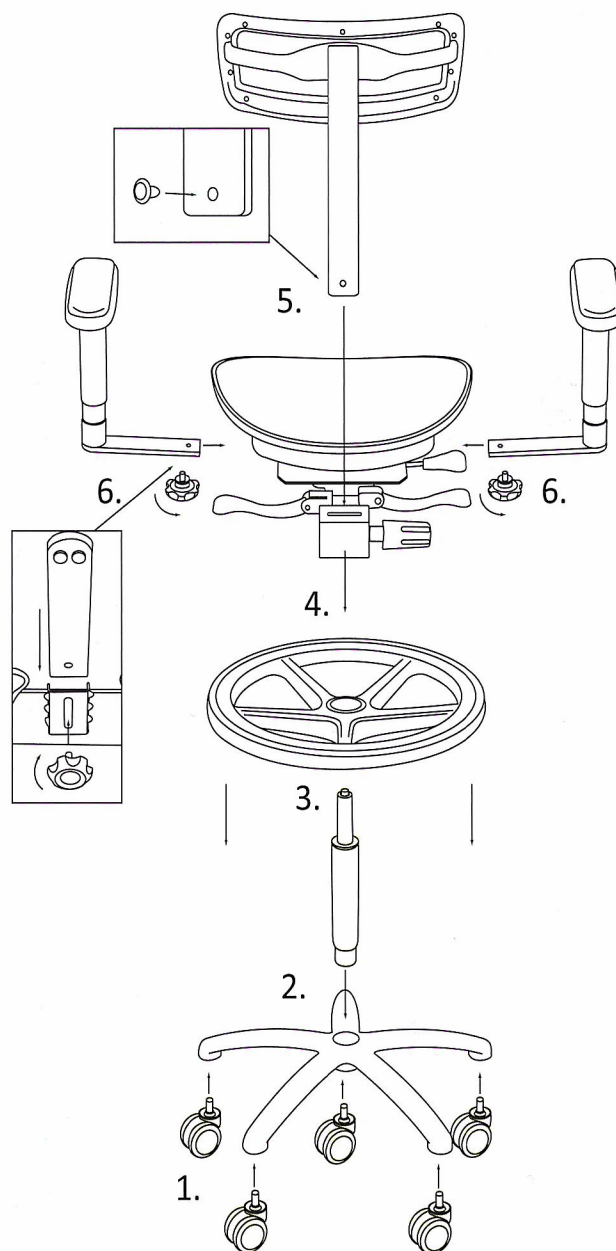

OPERATOR INSTRUCTIONS

1. Lift up on front, right lever to adjust seat height. (Right side).
2. Lift up on rear, right lever to adjust seat tilt. (Right side).
3. Rotate backrest height adjustment knob counter clockwise to loosen backrest. Once desired height is reached, rotate backrest height adjustment knob clockwise to lock backrest in place. (Right side).
4. Lift up on left lever to adjust backrest tilt. (Left side).
5. Push down on left lever until lever locks into place to actuate the free floating backrest. (Left side).

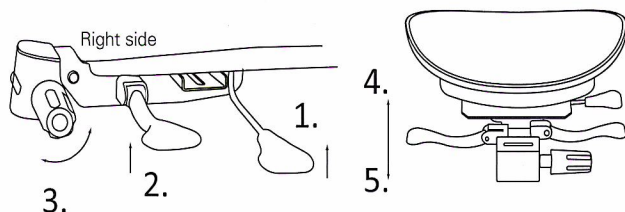

ADJUST ARMS

1. Rotate armrest pad clockwise or counter clockwise into desired position.
2. Pull up on lever to adjust armrest height

